

## Maintenance Instructions

### All other services:

Any servicing other than cartridge or UV lamp replacement, should be performed by an authorized service representative. Call, email, or Fax Paraclipse for the name of the nearest service representative.



**Use Genuine Paraclipse replacement Ultraviolet (UV) Lamps and Cartridges to maintain your Paraclipse product in proper working order. Use of Non-Paraclipse Replacement parts may cause damage to your Paraclipse equipment may void warranty.**

For replacement parts contact your dealer. Call, email, or Fax Paraclipse for the nearest dealer.

### Replacement Parts and Part Number:

Lamp kit # 62651

Cartridge (12 pack) # 63836

### To order additional Units:

**Paraclipse Mosquito Eliminator # 650110**

**120 Volt 50/60HZ**



### Care and Cleaning of Unit:

For the best results your unit should be cleaned regularly when you change the cartridge.

### When cleaning do the following:

1. Disconnect power cord from electrical outlet.
2. Use damp cloth to clean the body of the trap and lamp. Make sure you remove excess insect droppings and dead carcasses.
3. Dry trap thoroughly with soft cloth. Reconnect to electrical outlet.


**Paraclipse**  
**2271 East 29th Ave.**  
**PO Box 686**  
**Columbus, NE 68602-0686 USA**  
**Phone: (402)563-3625 or 1-800-854-6379**  
**Fax: (402) 564-2109**  
**Email: contact@paraclipse.com**

# Paraclipse®

## Automated Insect Control Division



# Paraclipse™ Mosquito Eliminator

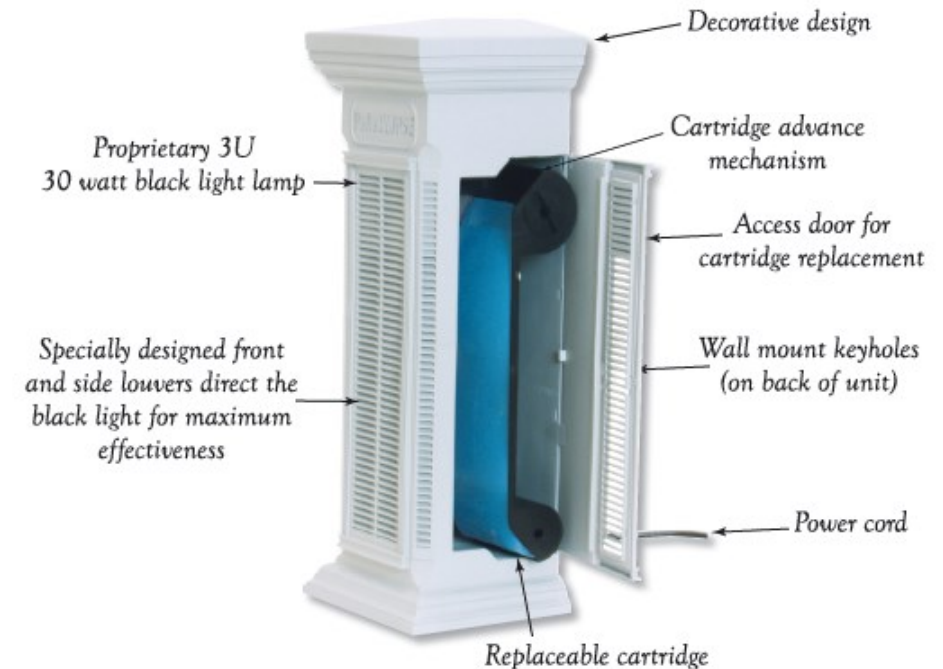

Dimensions: 21" H x 7.75" W x 7.0" D Weight: 7 lbs.

## SAVE THESE INSTRUCTIONS

## Paraclipse Mosquito Eliminator™ is their fatal attraction

### TABLE OF CONTENTS

Features and Benefits	Page 2
Important Safety Instructions	Page 3
Mounting Instructions	Page 4
Ultraviolet Lamp Installation	Page 5
Cartridge Installation & Manual Paper Advance	Page 6
Maintenance Instructions	Page 7 & 8

#### Features

- Decorative unit.
- Proprietary black light technology combined with special attractants.
- Exclusive, automatic advance 30 day cartridge trapping system.
- Versatile design.
- Fresh sticky surface and attractants released continuously.
- The trapping system is environmentally friendly and meets applicable guidelines.

#### Benefits

- Customers unaware that it is a mosquito/ flying insect trap.
- Attracts mosquitoes and other flying insects.
- Replaceable/disposable cartridge eliminates large quantities of mosquitoes/ flying insects.
- Can be wall mounted or free standing.
- No scattered insect parts from electrocution and no hazards from chemical pesticides.

## Maintenance Instructions

### Maintenance Instructions

#### **Cartridge Maintenance:**

The tacky surface of the Cartridge advances slowly and remains effective up to 30 days, under normal use depending on the volume of insect catch.

1. When tacky surface is no longer available you will need to replace the cartridge.
2. If the tacky surface is filled with a heavy catch of insects, manually advance the cartridge so fresh surface is available. (See pg. 6)

**NOTE: If new cartridge is not available for installation, unplug the unit until a Genuine Paraclipse replacement cartridge is available.**



#### **Ultraviolet lamp Replacement:**

1. Disconnect power cord from electrical outlet.
2. Remove old lamp.
3. Insert new lamp Insert UV Lamp into socket and **gently push upwards while turning lamp counter clockwise approximately 1/8 turn until the (2) lamp pins engage into the socket.** Hold by the base of lamp when installing. (see page 5, Fig. 4).

**DEAD INSECTS ARE UNSANITARY**

## REPLACEMENT CARTRIDGE PROCEDURES

### Remove Access Door

To install a replacement cartridge you must first remove access door. To remove access door, with the door facing you, grab the middle edge of the door, push towards back of unit and pull towards you (Fig.1). The door will come completely off the unit (Fig.2).

### Remove old Cartridge

Remove the cartridge by gently pulling out of unit towards you (Fig.4).

### Install New Cartridge

Hold the cartridge body in your hand (fig.3) with the drive spool knob facing you. Slide the cartridge into place (Fig.4) making sure the drive spindle is engaged with the motor drive shaft (located towards top of unit) and the supply roll placed on the guide pin (located towards bottom of unit). Once cartridge is in place rotate the drive spool in the direction of the arrow shown until glue surface spans the full length of the cartridge. This will require 7 to 8 rotations.

### Install Access Door

To put the access door back on simply line up the four tabs (Fig.2) on the door with the back plate of the unit. Once the tabs are lined up push the front of the door closed. The door will firmly snap into place.


### Cartridge Information:

The Paraclipse Mosquito Eliminator™ is unique in that the cartridge is automatic. After the initial start-up, the cartridge will automatically advance.

### Manual Paper Advance:

You can manually advance the tacky paper surface by simply turning the drive spool **clockwise** until the desired amount of tacky paper is available to catch insects. (Fig. 3)

This is required when installing a new cartridge and advancing the paper due to heavy insect catch.

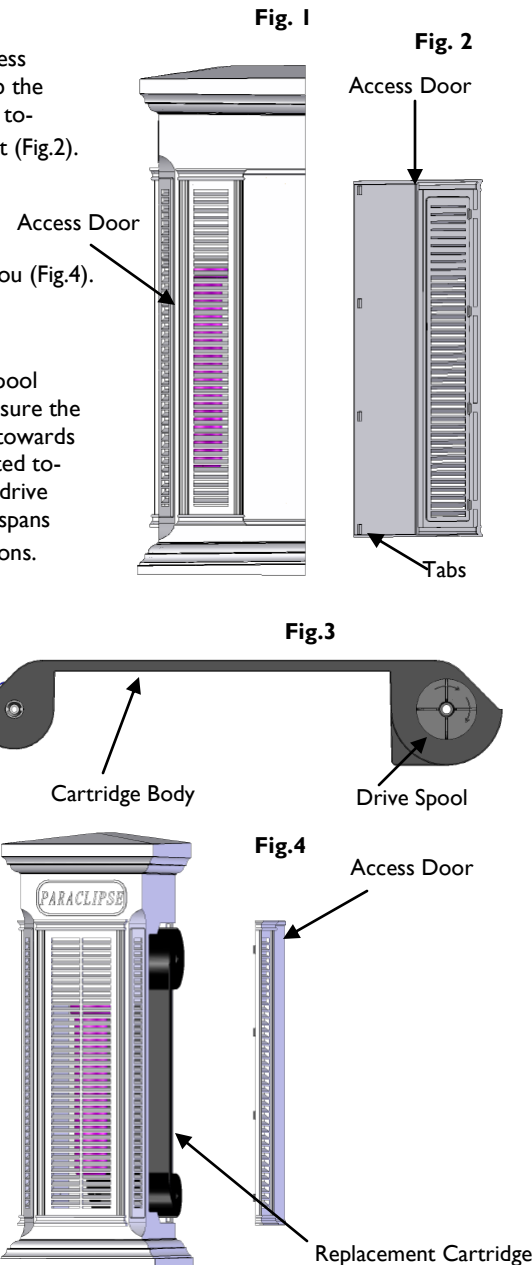

## IMPORTANT SAFETY INSTRUCTIONS



This symbol is intended to alert you of the presence of dangerous voltage within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



This symbol is intended to alert you of the presence of important operating and maintenance instructions accompanying the unit.

**Caution! To reduce the risk of electric shock, observe the following:**

1. Read all instructions before using appliance.
2. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
3. Do not remove the motor enclosure. No user serviceable parts are inside.
4. Disconnect the product from power supply when not in use, before servicing, cleaning, or when changing lamps. Replace lamp with the same type rated 30 watt lamp.
5. Use only extension cords marked W-A or equivalent. Its electrical rating must be at least 120 V, 60 Hz, and 10 Amps. Use only extension cords which have plugs and receptacles which accept product's plug.
6. Replace or repair damaged cords.
7. Don't abuse the cord. Never carry the product by the cord or yank it to disconnect it from the power source. Keep the cord from heat, oil, and sharp edges.
8. Extension cords & devices for retaining an extension cord connection to the power supply cord are available at most hardware stores.
9. Keep out of reach of children.

**CAUTION!** To avoid risk of contamination, observe the following: Dead insects are unsanitary. Use care in removing used cartridge.

## SAVE THESE INSTRUCTIONS

## Mounting Instructions

### Paraclipse Mosquito Eliminator™ Contents:

- Operation Manual.
- Anchor kit with Instructions.
  - Two drywall anchors.
  - Instructions.
  - Screws.
- One Frame Assembly.
- One Cartridge.
- One UV Lamp.

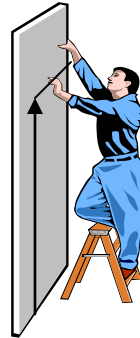


Fig. 1

**Note: 6' 6" (2.0m)  
maximum height**

**4'-6" (1.2m-1.8m) Preferred Height**

### Unit location on wall - Fig. 1

Select a wall away from windows or competing light source. For best results, install unit 4' to 6' (1.2 m to 1.8 m) above the floor.

### Mounting unit to wall - Fig. 2

1. Mark two locations on the wall for your fasteners that are 7" apart. Make sure that the marks are perpendicular with each other. The two wall mount keyholes are located on the back of unit (Fig. 2).
2. Use a Phillips head screwdriver to mount the frame assembly on the wall. **The frame assembly must be securely mounted to the wall.**

NOTE: For other surfaces, such as concrete, different fasteners or anchors may be required. These types of fasteners are not included.

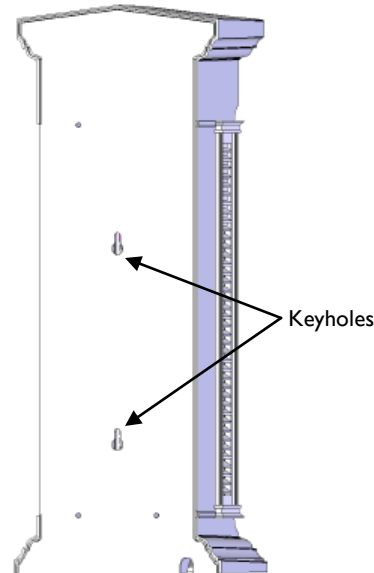


Fig. 2


## Lamp Installation Procedures

### Remove Access Door

To install a replacement lamp you must first remove access door. To remove access door, with the door facing you, grab the middle edge of the door, push towards back of unit and pull towards you. (Fig.1) The door will come completely off the unit (Fig.2).

### Remove Cartridge

Remove the cartridge by gently pulling out of unit towards you.

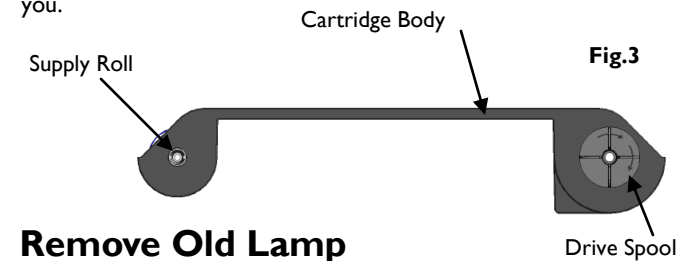

Access Door

Fig.3

Drive Spool

### Remove Old Lamp

Remove old lamp by pushing upwards and turning clockwise on the base of the lamp (Fig.4).

### Install New Lamp

Insert UV Lamp into socket and **gently push upwards while turning lamp counter clockwise approximately 1/8 turn until the (2) lamp pins engage into the socket.** Hold by the base of lamp when installing.(Fig.4).

### Install Cartridge

Hold the cartridge body in your hand (Fig.3) with the drive spool knob facing you. Slide the cartridge into place making sure the drive spindle is engaged with the motor drive shaft (located towards top of unit) and the supply roll placed on the guide pin (located towards bottom of unit).

### Install Access Door

To put the access door back on simply line up the four tabs on the door with the back plate of the unit. Once the tabs (Fig.2) are lined up push the front of the door closed. The door will firmly snap into place.

Fig. 1



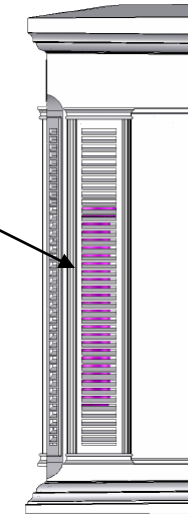


Fig. 2

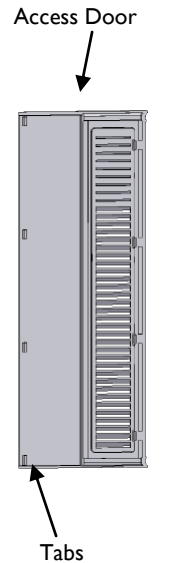

Tabs

Fig.4

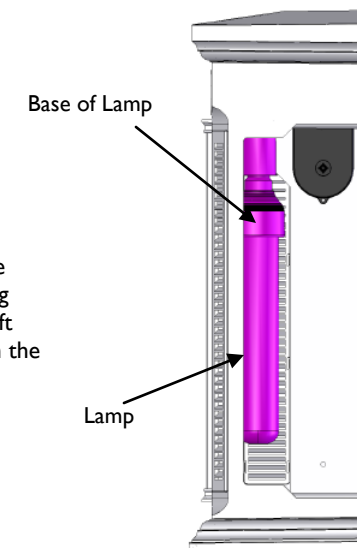

Base of Lamp

Lamp